

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER —

Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING —

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to place of purchase for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
7. Never use while sleeping.

8. Never drop or insert objects into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Air outlet grill and attachments may be very hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. To prolong the life of the dryer, keep filters clean of hair and dust.
16. Do not use with voltage converter.
17. Warning: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
18. When the hairdryer is used in bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
19. For additional protection, the installation of a residual current device (RCD) having

a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your electrician for advice.

20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure they do not play with the appliance.

For a dual voltage hair dryer:

21. Be sure voltage selector is in correct voltage position before operating. Before plugging in, read the information about dual voltage contained in this instruction section of this manual.
22. This appliance was set at the factory to operate at 120 volts. Refer to Additional Information section of this manual for conversion to 240 volts operation.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for professional use. Use on Alternating Current (60/50 Hz) only. Standard dryers are designed to operate at 110–120 or 220–240 volts A.C.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior-quality shampoos, conditioners, and finishing products.

DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying and possible damage to hair or skin, do not concentrate heat on one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warm temperature setting, then finish styling with cooler air.
6. This dryer includes a concentrator attachment. Use the attachment when you need drying power in a small area (such as a curl or a wave) or when you want to relax curly hair.

NANO TITANIUM™

Your Nano Titanium™ dryer has many benefits. Nano Titanium™ is an exceptional conductor of heat and is stable in ultra-high temperatures. The Nano Titanium™ technology uses microparticles of titanium that provide ultimate heat performance for beautiful, healthy hair results. Nano Titanium™ yields maximum far-infrared heat, penetrating the hair from within for gentle drying without damaging hair. Nano Titanium™ emits negative ions in their most beneficial form for faster drying, locking in hair's own natural moisture. This Nano Titanium™ dryer will give your hair a smooth, silky shine while eliminating frizz.

ION GENERATOR

ALLOWS FOR FASTER DRYING, REDUCES FRIZZ, RETAINS MOISTURE, AND MAKES HAIR SMOOTHER.

GET TO KNOW YOUR HAIRDRYER

Model BNT910C



ADDITIONAL INFORMATION

FOR DUAL-VOLTAGE DRYERS

For use in North America, the voltage selector switch should be placed in the 120 position. For use in several countries overseas, the voltage selector may need to be placed in the 240 position. Confirm the voltage available at each overseas location before using the appliance. For connection to a 240-volt supply, use an attachment plug adapter of the proper configuration for the power supply.

For 110–120 Volt Operation

Flick the dual voltage switch to the 120 position. In this position, the dryer operates on all available heat and speed settings.

For 220–240 Volt Operation

Unplug the unit. Make sure the switch is on the OFF position. Change the dual voltage switch to the 240 position. Operate the unit on LOW setting only. At 240V setting, the unit will operate at high speed/high heat. When at 240V setting, do not attempt to select high setting or change the dual voltage switch to 120 position. A plug adapter may be necessary in certain countries.

BODY & VOLUME

 
 
 
To create extra volume, bend head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

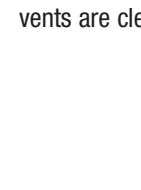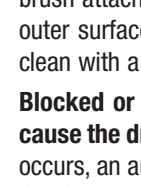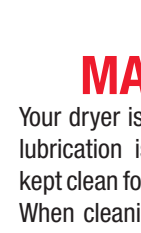

USER MAINTENANCE

Your dryer is virtually maintenance-free. No lubrication is needed. The dryer must be kept clean for proper operating performance. When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, turn the dryer off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or unit stops or operates intermittently.

If the cord or dryer is damaged or does not operate properly, return it for repair to place of purchase or an authorized BaBylissPRO® service representative only. No repairs should be attempted by the consumer.

STORAGE – IMPORTANT

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

IF YOU LIVE OUTSIDE CANADA, PLEASE CONTACT YOUR LOCAL DISTRIBUTOR.

CANADIAN ONE YEAR REPLACEMENT WARRANTY

BaBylissPRO Canada is the exclusive Canadian distributor of this product. We offer the following excellent warranty on your professional electrical appliance. Keep your sales slip. This is your proof of purchase and your guarantee. This guarantee is not valid in case of abuse, misuse, alterations or repairs done by unauthorized persons. Before returning your defective electrical product, please read the warranty conditions listed in this brochure.

Should your professional electrical appliance possess a manufacturer's defect, it may be exchanged by your distributor or BaBylissPRO Canada at no charge within ONE YEAR from date of purchase, if the electrical appliance is accompanied by a proof of purchase.

If you are sending your defective appliance which is covered by this guarantee, directly to the BaBylissPRO Canada Service Center, it must be accompanied by the following:

- 1) your dated sales slip;
- 2) a precise description of the defect;
- 3) your complete return address and daytime phone number; and,

4) a \$10 money order for postage and handling

Please return your defective appliance to:

ATTN: BaBylissPRO Canada Service Center
CONAIR CONSUMER PRODUCTS ULC
100 Conair Parkway
Woodbridge, Ontario
L4H 0L2

This warranty applies only to residents of Canada. Products shipped from outside of Canada will not be processed and will not be returned to sender.

For questions regarding this product, you may call BaBylissPRO Canada's Service Centre at:
1-800-363-0707, or email us at
customerservice@dannycoco.com.

BaBylissPRO
NANO TITANIUM™

GUIDE
D'UTILISATION
ET DE COIFFURE
POUR LE SÉCHOIR
NANO TITANIUM

Modèle BNT910C

Afin que votre appareil vous procure en toute sécurité beaucoup de satisfaction, lire attentivement le manuel d'utilisation avant de l'utiliser.

IB-24/140

